 
 


NAMES OF THE PARTS

 
FR-A053D(MF,SF)

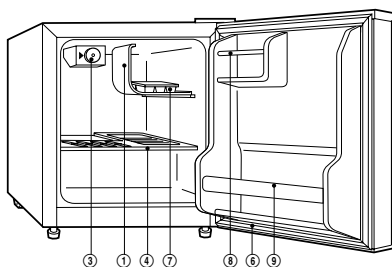

FR-A083D(MF,SF)

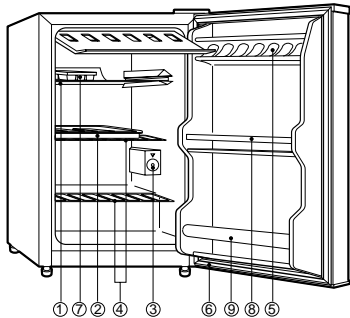

FR-A123D(MF,SF)

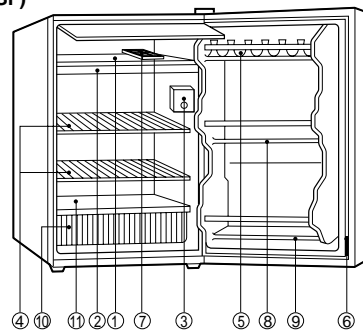

1. EVAPORATOR

The heart of the refrigerator.

It evaporates the refrigerant fluid and thereby absorbs heat from the surrounding. Made of pure aluminum.

2. DRAIN PAN (Use of Defrost Only)

Discards the water that drips of the evaporator when defrosting.

3. CONTROL BOX :

Regulates the operation of the motor and controls the inside temperature of the refrigerator.

4. SHELF

Has full width and can slide out.

5. RACK For butter, eggs, and small size goods.

6. MAGNETIC DOOR SEALS

Keeps the refrigerator virtually airtight all along the edge, but is nevertheless easy to open.

7. ICE CUBE TRAY Ice cubes are easy to remove from the tray.

8. USABLE RACK for cans or jars.

9. BOTTLE RACK for bottles, cans or jars.

10. CRISPER for vegetables and fruits.

11. SLIDE OUT CRISPER COVER.

 
HOW TO OPERATE

Starting your new Refrigerator

1. Clean the refrigerator thoroughly. Wipe the outside with a soft dry cloth, the inside with a damp cloth.
2. Keep the door open and insert the power supply cord into the socket.
3. Turn the thermostat dial to "7". Close the door and let the refrigerator operate for 15-20 minutes.
The freezer should then show some traces of frost.

Temperature control

You can control the inside temperature by turning the thermostat dial. Higher numbers mean greater cooling power, smaller numbers mean less cooling power. To make ice cubes in the freezer compartment, set the dial to "7". The dial does not have to be set exactly on the numbers, but can be any place in between.

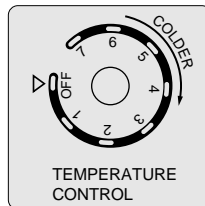

NOTE: Wait 3 to 5 minutes before restarting if you unplug the machine. Unit may fail to operate properly if restarted too quickly.

How to defrost

Defrost the refrigerator when the frost accumulated on the evaporator is about 5mm(1/5inch) thick.

Set the thermostat dial to "OFF". Remove foods. Keep drip tray in place. Defrosting usually takes a few hours. To defrost quickly remove all foods from the refrigerator and leave door open. Never use a knife or other metal instrument to remove ice/frost from the evaporator. After defrosting empty water from drip tray, return the thermostat dial to the desired position to start refrigerating again.

HOW TO CLEAN

Cleaners: The cleaners noted below are available. Never use harsh, abrasive cleaners, heavy-duty cleaners, or solvents on any surface.

Exterior: Wipe with damp, sudsy cloth, rinse and dry. For stubborn stains and for periodic waxing, use silicon wax.

Evaporator: When refrigerator needs defrosting turn thermostat dial to "OFF". Do not use sharp instruments.

Refrigeration Section: Wash shelves and other removable parts in warm sudsy water, rinse and dry. Wash interior with baking soda solution (3 table spoons to one quart of water) or warm sudsy water, rinse and dry.

Magnetic Door Seals: Wash with warm sudsy water.

 
The Finishing Touch: Replace all parts and return thermostat dial to desired setting.

HOW TO INSTALL

Install refrigerator in a convenient location away from extreme heat and cold. Allow sufficient clearance between the refrigerator and side wall so the door will open for a fully usable interior. Refrigerator is not designed for recessed installation.

Select a place with strong level floor.

Allow 5 inches of space between the refrigerator's side and the wall.

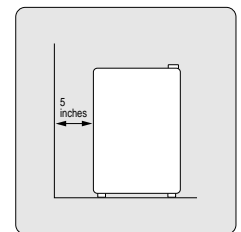

WHAT TO DO...

1. When out of operating for a long time:

- Remove the power supply cord.
- Dry your refrigerator opening the door for 2-3 days.

2. When you get ready to move:

- Securely fasten removable interior parts (or move and package them separately)
- Do not lay your refrigerator horizontally, or compressor may be damaged.

When you need service: Before you call for service make sure you need it, check a few things noted below for yourself first.

If refrigerator is not operating:

- Is the power supply cord unplugged?
- Is home fuse blown or circuit breaker off?

If refrigerator is warmer than usual:

- Has the door been open frequently or for a long period?
- Is refrigerator overcrowded-preventing good air circulation?
- Is the hot thing stored without cooling?
- Is the clearance between refrigerator's side and the wall allowed sufficiently?

If there are unusual sounds:

- Is refrigerator placed on the level?
- Are foreign objects behind the refrigerator?
- Are dishes on refrigerator shelves vibrating?
If so, rearrange the dishes.

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a simmilary qualified person in order to avoid a hazard.

CHANGING THE REVERSIBLE DOOR

 
MODEL : FR-A053DSF, FR-A083DSF, FR-A123DSF

This refrigerator has been built with the door hinges on the right.


If you wish to change the opening direction, follow the instruction below:

- Unplug the refrigerator from its electrical outlet.
- Empty everything in the refrigerator, including shelves, food, etc.


1. Remove the hinge cover on the right top of the cabinet.
2. Remove the two screws (using a ratchet tool with a 8MM socket) that hold the top hinge to the cabinet. Keep these screws for later use.
3. Lift the top hinge straight up to free the pin from the socket on the top of the door.
4. Lift the door and place it on a padded surface to prevent scratching it.


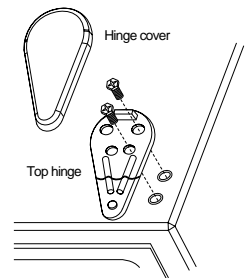


 5. Remove the plug buttons from the upper left holes as illustrated and transfer them to the uncovered holes at the right side. Be sure to press the plug buttons firmly into the holes.

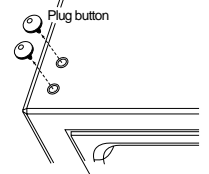

   6. Lay the cabinet on its side down on the floor. Remove the two screws that hold the bottom hinge to the cabinet using a 10MM socket. Keep these screws and washer for later use.

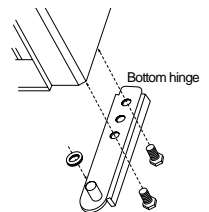
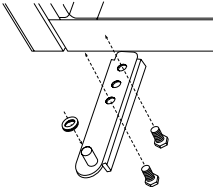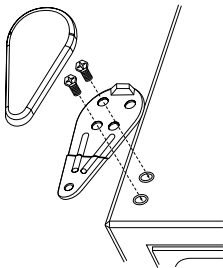
<p>7. Insert the bottom hinge at the left side using the two screws previously removed in step 6.</p> <p>NOTE: Do not tighten screws.</p> <p>8. Stand the cabinet.</p> <p>9. Replace the door making sure the bottom socket enters the bottom hinge pin. Be sure washer is in place.</p>	
<p>10. While holding the door in the closed position, secure the top hinge at the left side using the two screws previously removed at the beginning in step 2. Do not tighten the screws until the top of the door is leveled with the top cabinet.</p> <p>11. Replace the hinge cover.</p>	
<p>12. Tools required:</p> <ul style="list-style-type: none"> -8MM & 10MM socket-ratchet. -Putty knife or thin-blade screwdriver. 	

 
DAEWOO

REFRIGERATOR

INSTRUCTION MANUAL

Model No.

FR-A053D(SF,MF) / FR-A083(MF,SF) / FR-A123(MF,SF)

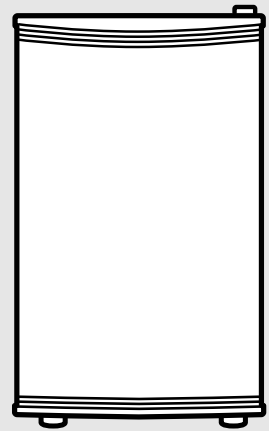

Before use, please read this manual carefully.
Always remove the drain pan while this refrigerator is running.
Removing the drain pan will enhance the cooling power and save your electric cost.