



# 2284

Isolation amplifier

No. 2284V104-UK From ser. no.970388001



- DK PR electronics A/S tilbyder et bredt program af analoge og digitale signalbehandlingsmoduler til industriel automation. Programmet består af Isolatorer, Displays, Ex-barrierer, Temperaturtransmittere, Universaltransmittere mfl. Vi har modulerne, du kan stole på i selv barske miljøer med elektrisk støj, vibrationer og temperaturudsving, og alle produkter opfylder de strengeste internationale standarder. Vores motto »Signals the Best« er indbegrebet af denne filosofi - og din garanti for kvalitet.
- UK PR electronics A/S offers a wide range of analog and digital signal conditioning devices for industrial automation. The product range includes Isolators, Displays, Ex Interfaces, Temperature Transmitters, and Multifunctional Devices. You can trust our products in the most extreme environments with electrical noise, vibrations and temperature fluctuations, and all products comply with the most exacting international standards. »Signals the Best« is the epitome of our philosophy and your guarantee for quality.
- FR PR electronics A/S offre une large gamme de produits pour le traitement des signaux analogiques et numériques dans tous les domaines industriels. La gamme de produits s'étend des transmetteurs de température aux afficheurs, des isolateurs aux interfaces SI, jusqu'aux modules universels. Vous pouvez compter sur nos produits même dans les conditions d'utilisation sévères, p.ex. bruit électrique, vibrations et fluctuations de température. Tous nos produits sont conformes aux normes internationales les plus strictes. Notre devise »SIGNALS the BEST« c'est notre ligne de conduite et pour vous l'assurance de la meilleure qualité.
- DE PR electronics A/S verfügt über ein breites Produktprogramm an analogen und digitalen Signalverarbeitungsgeräte für die industrielle Automatisierung. Dieses Programm umfasst Displays, Temperaturtransmitter, Ex- und galvanische Signaltrenner, und Universalgeräte. Sie können unsere Geräte auch unter extremen Einsatzbedingungen wie elektrisches Rauschen, Erschütterungen und Temperaturschwingungen vertrauen, und alle Produkte von PR electronics werden in Übereinstimmung mit den strengsten internationalen Normen produziert. »Signals the Best« ist Ihre Garantie für Qualität!

# **ISOLATION AMPLIFIER**

# Type 2284

### **CONTENTS**

Warning	2
Symbol identification	3
Safety instructions	3
How to dismantle system 2200	5
Application	6
Description	6
Technical characteristics	6
Input	6
Output	6
Electrical specifications	7
Order: 2284	9
Block diagram	9
Programming	10

# GENERAL

#### WARNING

This device is designed for connection to hazardous electric voltages. Ignoring this warning can result in severe personal injury or mechanical damage.

To avoid the risk of electric shock and fire, the safety instructions of this manual must be observed and the guidelines followed. The electrical specifications must not be exceeded, and the device must only be applied as described in the following.

Prior to the commissioning of the device, this manual must be examined carefully.

Only qualified personnel (technicians) should install this device. If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.



# HAZARDOUS

#### WARNING

Until the device is fixed, do not connect hazardous voltages to the device. The following operations should only be carried out on a disconnected device and under ESD safe conditions:

Dismantlement of the device for setting of DIP-switches and jumpers.

General mounting, connection and disconnection of wires. Troubleshooting the device.



Repair of the device and replacement of circuit breakers must be done by PR electronics A/S only.



INSTAL-

#### WARNING

To keep the safety distances, devices with two built-in relays must not be connected to both hazardous and non-hazardous voltages on the same device's relay contacts.

SYSTEM 2200 must be mounted in socket type S3B Releco (order no 7023).

#### SYMBOL IDENTIFICATION



Triangle with an exclamation mark: Warning / demand. Potentially lethal situations



 $\mathsf{C} \in \mathsf{The} \ \mathsf{CE} \ \mathsf{mark} \ \mathsf{proves} \ \mathsf{the} \ \mathsf{compliance} \ \mathsf{of} \ \mathsf{the} \ \mathsf{device} \ \mathsf{with} \ \ \mathsf{the} \ \mathsf{requirements} \ \mathsf{of} \ \mathsf{the} \ \mathsf{directives}.$ 



The double insulation symbol shows that the device is protected by double or reinforced insulation.

## SAFETY INSTRUCTIONS

#### DEFINITIONS

Hazardous voltages have been defined as the ranges: 75...1500 Volt DC, and 50 1000 Volt AC

**Technicians** are qualified persons educated or trained to mount, operate, and also troubleshoot technically correct and in accordance with safety regulations.

Operators, being familiar with the contents of this manual, adjust and operate the knobs or potentiometers during normal operation.

#### RECEIPT AND UNPACKING

Unpack the device without damaging it. The packing should always follow the device until this has been permanently mounted. Check at the receipt of the device whether the type corresponds to the one ordered.

#### ENVIRONMENT

Avoid direct sunlight, dust, high temperatures, mechanical vibrations and shock, as well as rain and heavy moisture. If necessary, heating in excess of the stated limits for ambient temperatures should be avoided by way of ventilation.

All devices fall under Installation Category II. Pollution Degree 1, and Insulation Class II.

#### MOUNTING

Only technicians who are familiar with the technical terms, warnings, and instructions in the manual and who are able to follow these should connect the device

Should there be any doubt as to the correct handling of the device, please contact your local distributor or, alternatively,

> PR electronics A/S www.prelectronics.com

Mounting and connection of the device should comply with national legislation for mounting of electric materials, i.a. wire cross section, protective fuse, and location. Descriptions of Input / Output and supply connections are shown in the block diagram and side label.

The following apply to fixed hazardous voltages-connected devices:

The max. size of the protective fuse is 10 A and, together with a power switch, it should be easily accessible and close to the device. The power switch should be marked with a label telling it will switch off the voltage to the device.

#### CALIBRATION AND ADJUSTMENT

During calibration and adjustment, the measuring and connection of external voltages must be carried out according to the specifications of this manual. The technician must use tools and instruments that are safe to use.

#### NORMAL OPERATION

Operators are only allowed to adjust and operate devices that are safely fixed in panels, etc., thus avoiding the danger of personal injury and damage. This means there is no electrical shock hazard, and the device is easily accessible.


#### CLEANING

When disconnected, the device may be cleaned with a cloth moistened with distilled water.


#### LIABILITY

To the extent the instructions in this manual are not strictly observed, the customer cannot advance a demand against PR electronics A/S that would otherwise exist according to the concluded sales agreement.

#### **HOW TO DISMANTLE SYSTEM 2200**

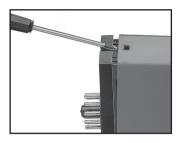

Picture 1:
The back panel of the device is detached from the housing by way of a screwdriver.

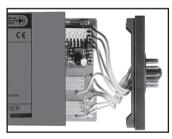

#### Picture 2:

After this, the back panel can be pulled out together with the PCB, but please notice the position of the PCB as there is a number of different positions in the house. Do not pull the wires unnecessarily, instead pull the PCB.

Switches and jumpers can now be moved.

When assembling the back plate and housing, please make sure no wires are stuck.

#### **ISOLATION AMPLIFIER 2284**

- Galvanically separated input, output, and supply
- Bipolar current / voltage input
- Signal conversion
- Current and voltage output
- 24 VDC or universally supplied
- Applicable in PELV/SELV circuits

#### Application

Galvanic separation of analogue signals (ground loop elimination).

Measurement of floating signals.

Signal conversion within the ranges: -250...+250 VDC or -50...+50 mA on the input and 0...10 (20) VDC and 0...20 mA on the output.

#### Description

The 2284 uses microprocessor technology for the selection of gain and zero offset, yet the signal processing is analogue with a fast response time of less than 25 ms.

#### Technical characteristics

In standard ranges, the 2284 is programmable within the input and output ranges using internal DIP-switches.

Provided that the front adjustments are still sealed, the unit needs no readjustment after programming.

The unit is galvanically separated between input, supply, and output.

#### Input

Current or voltage in standard or special ranges within the measurement range. The programming schedule shows the standard ranges. Nominal standard input resistance is 50  $\Omega$  for mA signals. The 2284 has a 2-wire transmitter supply and a reference voltage of 2.5 VDC, max. 15 mA for short circuit-protected supply of potentiometers.

#### Output

The output can be ordered for standard or special currents and voltages within the signal range.

**Standard current output** (pin 3) 0/4...20 mA, and 0/1...5 mA acc. to the programming schedule with the possibility of signal reversal.

**Standard voltage output** (pin 2) is achieved by short-circuiting pins 2 and 3. The voltage signal is available between pins 2 and 1.

For voltage signals in the range 0...1 VDC, a 50  $\Omega$  shunt (DP 2-1) is applied; in the range 0...10 VDC, a 500  $\Omega$  shunt (DP 2-2) is applied.

Using both signals simultaneously, the mA-loop to ground must go through the internal shunt.

The 2284 is available with a buffered voltage output, 0...20 V 10 mA. The current output cannot be used simultaneously. In applications where the output must sink current, the following min. voltages on the output can be achieved: At 100 uA: 10 mV. and at 1 mA: 90 mV.

Fine adjustment of 0 and 100% values for special ranges is possible at the front  $\pm 2.5\%$ , but please note that the basic calibration is thereby lost.

#### **Electrical specifications**

#### Specifications range:

-20°C to +60°C

#### Common specifications:

Supply voltage, DC	19.228.8 VDC
Universal supply, voltage	21,6253 VAC, 5060 Hz
	19,2300 VDC
Max. consumption 2284D, (24 VDC)	≤ 2.4 W
Max. consumption 2284P (uni. sup.)	≤ 2.5 W
Isolation, test / operation	3.75 kVAC / 250 VAC
Signal / noise ratio	Min. 60 dB
Response time (090%)	< 25 ms
Temperature coefficient	< ±0,01% of span / °C
Linearity error	< ±0,1% of span
Effect of supply voltage change	< ±0.005% of span / V
2-wire transmitter supply (pin 75)	1928 VDC / 200 mA
Reference voltage	2.5 VDC ±0.5%, 15 mA
EMC immunity influence	< ±0,5% of span


Relative air humidity	
Dimensions (HxWxD) (D is without pins)	
Protection degreeWeight DC / universally supplied	
Input:	1238, 1038
Measurement range	-50+50 mADC
Min. measurement range (span)	
Max. offset	
Input resistance	Nom. 50 $\Omega$
Voltage:	
Measurement range	
Min. measurement range (span) Max. offset	
Input resistance	
Current output:	7 1 132 10 1 132
Signal range	0 20 mA
Min. signal range	
Max. offset	
Load (max.)	
Load stability	
Current limit	2328 mA
Voltage output through internal shunt:	
Signal range	
Min. signal span Max. offset	
Load (min.)	
Buffered voltage	
Max. load	10 mA
Observed authority requirements:	Standard:
EMC 2004/108/EC	
LVD 2006/95/EC	
PELV/SELV	
EAC TR-CU 020/2011	FIN 0T35P-T

**Of span** = Of the presently selected range

#### Order: 2284

Туре	Input		Outpu	t	Supply		Output t	уре
2284	020 mA	: A	Special	: 0	24 VDC	: D	Standard	:1
	420 mA	: B	020 mA	:1	24230 VAC &	: P	Buffered	: 2
	01 V	: C	420 mA	420 mA : 2 24250 VDC		voltage		
	0,21 V	: D	05 mA	: 3				
	010 V	: E	01 V	: 4				
	210 V	: F	0,21 V	: 5				
	02,5 V	: G	010 V	: 6				
	-10+10 V	: H	210 V	: 7				
	Special	: X	02,5 V	: 8				

# **BLOCK DIAGRAM**

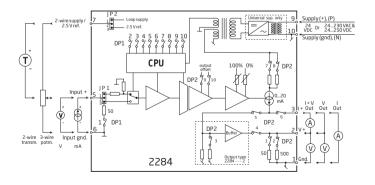

#### **PROGRAMMING**

INPUT PROGRAMMING		10-pole) 2, 3, 4, 5, 6	JP1 POSITION		
	SW ON	SW OFF	1-2	2 - 3	
05 mA 020 mA 0100 mV 0500 mV 01 V 02.5 V 010 V 0100 V	1, 2, 3 1, 2, 3, 4 - 4 3 3, 4 2 2, 4	4, 5, 6 5, 6 1, 2, 3, 4, 5, 6 1, 2, 3, 5, 6 1, 2, 4, 5, 6 1, 2, 5, 6 1, 3, 4, 5, 6 1, 3, 5, 6	X	X X X X X	
For 20% offset on input, set DP1 SW5 ON e.g. input 420 mA	1, 2, 3, 4, 5	6		Х	
For bipolar input set DP1,SW6 ON e.g10 V+10 V	2, 6	1, 3, 4, 5	Х		

OUTPUT PROGRAMMING	DP1 (10-pole) SW 7, 8, 9, 10		**DP2 (10-pole) SW 1, 2, 6, 7, 8, 9, 10	
	SW ON	SW OFF	ON	OFF
05 mA 020 mA 05 mA / 0250 mV 020 mA / 01 V 05 mA / 02.5 V 020 mA / 010 V	8 7 8 7 8 7	7, 9, 10 8, 9, 10 7, 9, 10 8, 9, 10 7, 9, 10 8, 9, 10	6, 7 6, 8 1, 6, 7 1, 6, 8 2, 6, 7 2, 6, 8	1, 2, 8, 9, 10 1, 2, 7, 9, 10 2, 8, 9, 10 2, 7, 9, 10 1, 8, 9, 10 1, 7, 9, 10
For 20% offset on output, set DP1 SW9 ON, DP2 SW9 and SW10 ON e.g. output 420 mA	7, 9	8, 10	6, 8, 9, 10	1, 2, 7
For reversed output set DP1 SW10 ON e.g. output 204 mA	7, 9, 10	8	6, 8, 9, 10	1, 2, 7

<sup>\*\*</sup> DP2 SW 6 is ON and SW 3, 4, 5 are OFF, except for buffered output 2284---2. **Note:** At other spans than the above-mentioned and at a buffered voltage output, DP1, DP2, JP1, and JP2 have a different setting which applies to the delivered special range. The buffered voltage output cannot be programmed acc. to the above programming table, but will be delivered fully-configured from factory.



**Displays**Programmable displays with a wide selection of inputs and outputs for display of temperature, volume and weight, etc. Feature linearization, scaling, and difference measurement functions for programming via PReset software.



**Ex interfaces** Interfaces for analog and digital signals as well as HART signals between sensors / I/P converters / frequency signals and control systems in Ex zone 0, 1 & 2 and for some devices in zone 20, 21 & 22.



**Isolation** Galvanic isolators for analog and digital signals as well as HART signals. A wide product range with both loop-powered and universal isolators featuring linearization, inversion, and scaling of output signals.



**Temperature** A wide selection of transmitters for DIN form B mounting and DIN rail devices with analog and digital bus communication ranging from application-specific to universal transmitters.



**Universal** PC or front programmable devices with universal options for input, output and supply. This range offers a number of advanced features such as process calibration, linearization and auto-diagnosis.







www.prelectronics.es
sales-es@prelectronics.com

www.prelectronics.it
sales-it@prelectronics.com

www.prelectronics.se sales-se@prelectronics.com

www.prelectronics.com
sales-uk@prelectronics.com

www.prelectronics.com
sales-us@prelectronics.com

www.prelectronics.cn
sales-cn@prelectronics.com

www.prelectronics.besales-be@prelectronics.com

#### Head office

Denmark PR electronics A/S Lerbakken 10 DK-8410 Rønde www.prelectronics.com sales-dk@prelectronics.com tel. +45 86 37 26 77 fax +45 86 37 30 85





